

INSTALLATION INSTRUCTIONS:

- 1) REMOVE TOP CAP BY UNSCREWING REAR SCREWS.
- 2) SLIDE SLATWALL GRID OUT THE TOP OF BACK PANEL.
- 3) DRILL AND BOLT BACK PANEL TO CABINET.
- 4) SLIDE SLATWALL GRID BACK INTO BACK PANEL.
- 5) SET ON TOP CAP AND REFASTEN SCREWS.
- 6) SCREW THICK END PANEL TO THE BACK OF BACK PANEL USING #10 X 1/2" SHEET METAL SCREWS.
- 7) SCREW FLAT END PANEL TO OUTSIDE EDGE OF BACK PANEL. THIS END PANEL MAY BE SCRIBED TO FIT IN WINDOW AREA.

TOP CAP

SLATWALL
GRID
(OPTION)

END PANEL
(OPTIONAL)

BACK
PANEL

BOTTOM

CABINET

FLAT END PANEL
(FOR USE NEXT
TO WINDOW)

NOTE: DOUBLE WIRE
AT TOP OF GRID.

REVISION		 ROYSTONTM ROYSTON LLC ONE PICKROY ROAD JASPER, GA 30143		REF. NO. 74647	CODE		
1							
2							
3							
4		DESC. WIRE SLATWALL BACK INSTALLATION SHEET		SHIP			
5		TOLERANCES: .XXX = ± .015 .XX = ± .030 ANGLES = ± 1° <i>UNLESS OTHERWISE NOTED</i>		PART NO.			
6		GAGE	MATERIAL	DWN BY SB	CKD BY	DATE 2-28-02	42392