


ROYSTON MODULAR MERCHANDISING SYSTEM

"T" UNIT DRAWER KIT (FOR UNIT WITH CASTER FRAME)

PARTS LIST

NO.	DESCRIPTION	QTY.
1	ASSEMBLED CASTER FRAME	1
2	ASSEMBLED "T" UNIT	1
3	DRAWER TRACK	2
4	#10 X 1/2 PH TH TYPE "A" SCREW	4
5	PLASTIC PUSH-IN BUTTONS	2
6	DRAWER ASSEMBLY	1

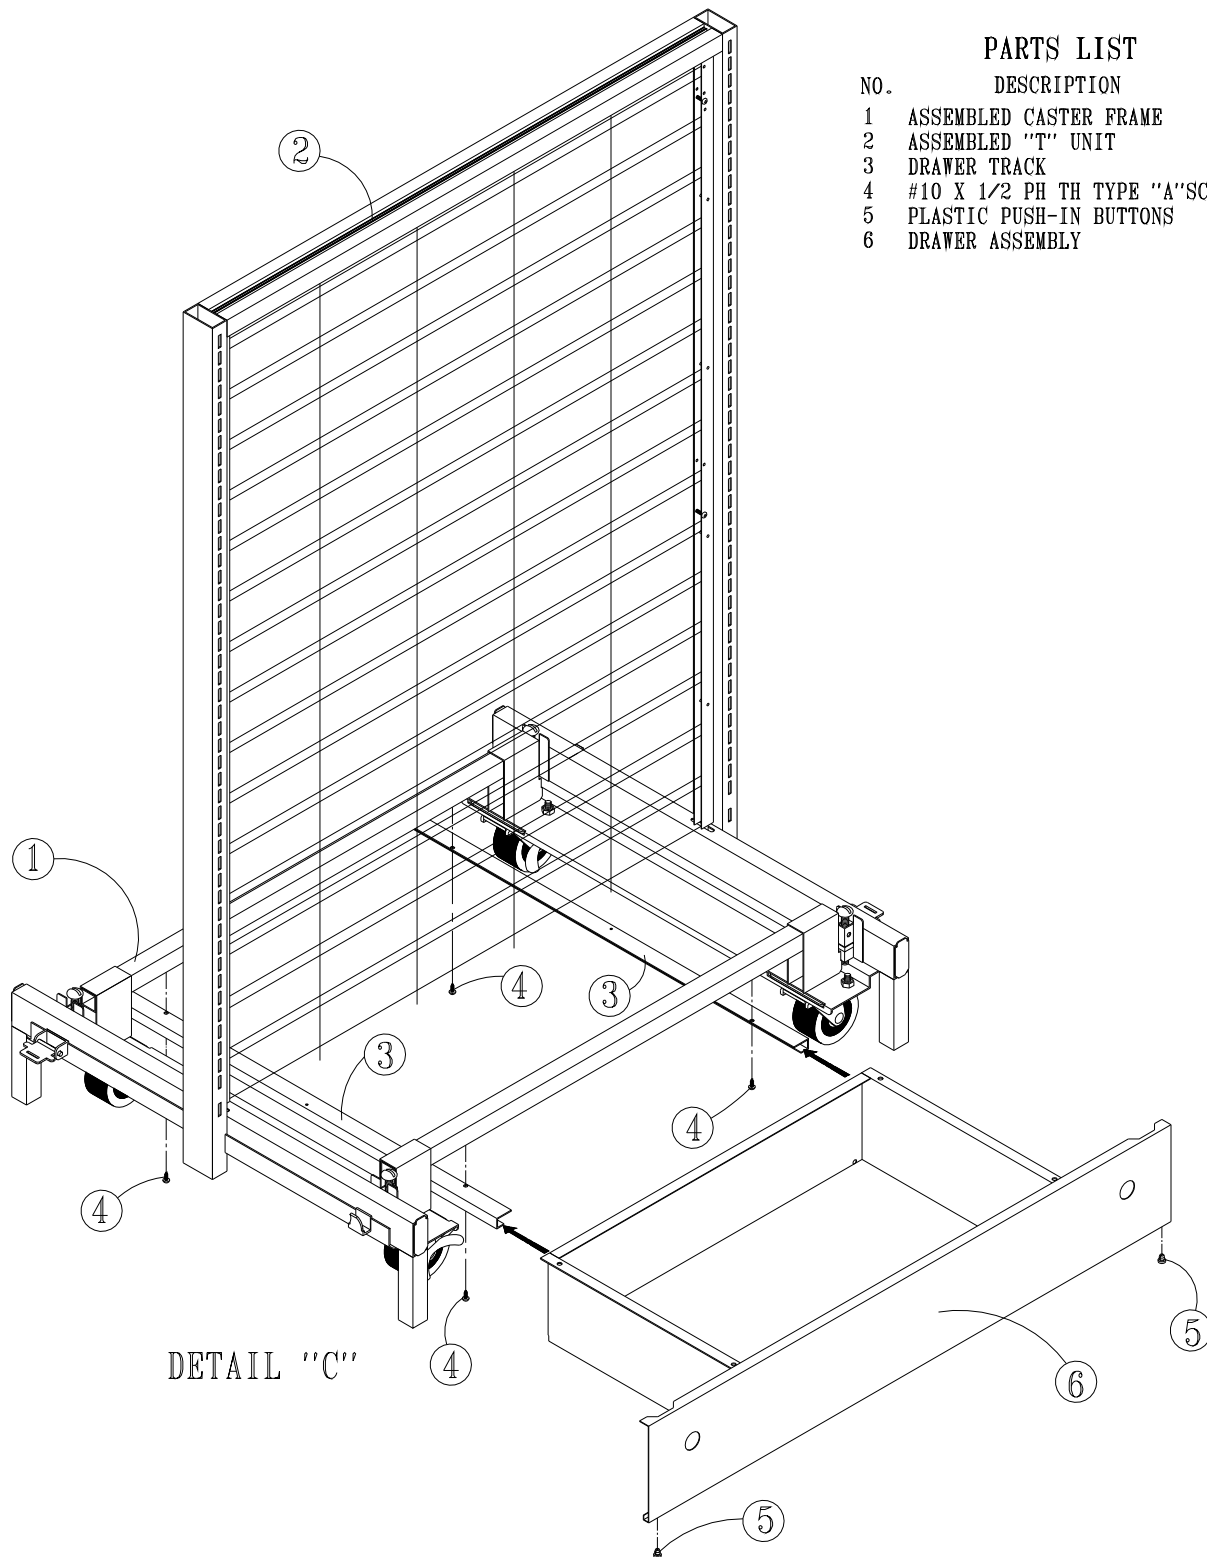

STEP 1: PLACE CASTER FRAME (1) UPSIDE DOWN (WHEELS UP!) AND INSTALL TWO DRAWER TRACK (3) WITH FOUR SCREWS (4). HAND TIGHTEN. SEE DETAIL "C".

STEP 2: PLACE CASTER FRAME ON FLOOR (WHEELS DOWN!) AND SIT UPRIGHT/BACK ASSEMBLY (2) OVER THE CASTER FRAME PER DETAIL "C".

STEP 3: INSTALL TWO PLASTIC PUSH-INS (5) IN BOTTOM EDGE OF DRAWER FRONT.

STEP 4: INSTALL DRAWER (6) BY PLACING DRAWER BODY FLANGES INTO DRAWER TRACK (3) AND PUSHING DRAWER CLOSED. INSTALL BASE SHELVES OF "T" UNIT.

NOTE: UNIT MAY HAVE ONE OR TWO DRAWERS AS DESIRED.